# SHELCO MicroVantage<sup>™</sup> MPX Series

Absolute-Rated (99.98%) High Performance Pleated Polypropylene Filter Cartridges

# MicroVantage Ultra Premium Filter Series



# **Specifications & Operating Parameters**

Pore Sizes 0.2, 0.45, 1.0, 3.0, 5.0, 10.0, 20.0, 30.0, 40.0, 50.0 microns

*Nominal Lengths* 9.75" (24.7 cm), 10" (25.4 cm), 20" (50.8 cm), 30" (76.2 cm), 40" (101.6 cm)

Outside Diameter 2.67" (6.78 cm)

Inside Diameter 1.0" (2.54 cm)

Media Surface Area 7.0 sq. ft. (0.65 m2) per ten inches in length

#### Gaskets/O-rings

Silicone, Buna N, EPR, Viton, Teflon Encapsulated Viton (o-rings only)

#### Materials of Construction

Filter Media: Outer Cage / Core / End Caps: Polypropylene Polypropylene

- Absolute-Rated Beta 5000 (99.98%) retention efficiency
- 7.0 square feet (0.65 m2) of media surface area per 10" length
  Maximum throughput and particle retention
  Longer service life reduces maintenance costs
  - Longer service me reduces maintenance costs
- 100% polypropylene construction offers wide range of chemical compatibility
- Rigid, molded cage provides greater structural integrity
- Gradient, fixed pore structure increases dirt-holding capacity and resists unloading under high differential pressure
- · Manufactured in state-of-the-art white room for high purity
- Complies with Food & Drug Administration's CFR criteria for food & beverage contact
- Meets USP Class VI Biological Test for plastics
- Various end cap configurations available to fit existing housings
- Produced in continuous lengths up to 40 inches
- Optional preflushed cartridges available for electronic and pharmaceutical applications

# **Applications**

RO Prefilters	Food & Beverage
Process Water	Bottled Water
Plating Solutions	Microelectronics
Chemicals	Paint/Inks
Water & Wastewater	Cosmetics

**Maximum Operating Temperature 176F (80C)** 

**Recommended Change-out Differential Pressure** 35 psid (2.4 bar)

*Maximum Differential (Collapse) Pressure* 75 psid @ 70°F (5.2 bar @21°C), 40 psid @176°F (2.8 bar @ 80°C)


#### Sanitization and Sterilization

Hot water at 175°F (80°C) at 5 psid for 30 minutes In-line steam at 257°F (125°C) @ 1 psid (0.07 bar) for 30 minutes Autoclavable at 257°F (125°C) for 30 minutes

#### FDA and USP Compliance

All filters are manufactured of virgin polypropylene materials. All materials comply with FDA requirements for food contact per CFR Title 21 174.5, 177.1520 and 177.1630. All Components meet USP Class VI Plastics biological reactivity tests. Flow vs. Pressure Drop

### Filter Removal Efficiency

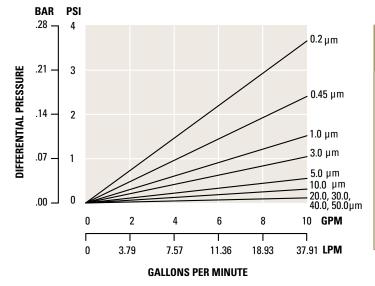

PORE SIZE	BETA 5000 99.98%	BETA 100 99%	BETA 50 98%
0.2 micron	0.20	0.10	0.05
0.45 micron	0.45	0.30	0.20
1.0 micron	1.0	0.65	0.35
3.0 micron	3.0	2.5	2.0
5.0 micron	5.0	4.0	3.0
10.0 micron	10.0	8.0	7.0
20.0 micron	20.0	17.0	15.0
30.0 micron	30.0	26.0	21.0
40.0 micron	40.0	34.0	28.0
50.0 micron	50.0	42.0	36.0

This chart represents typical water flow per 10" cartridge length. The test fluid is water at ambient temperature. Extrapolation for multiple elements tends to be linear, but as flows increase the  $\Delta P$  of the housing becomes more apparent

# Ordering Guide (Example: MPX1.0-10S3E)

МРХ	1.0	10 -	- <b>S</b> 3	E -	_
PRODUCT CODE	MICRON	LENGTH	END CAP CONFIGURATION	GASKET / O-RING	OPTION
МРХ	0.2 0.45 1.0 3.0 5.0 10.0 20.0 30.0 40.0 50.0	9.75" 10" 20" 30" 40"	S1 =DOES3 =222 w/ Fin EndS4 =222 w/ Flat EndS5 =226 w/ Fin EndS6 =226 w/ Flat EndS7 =Internal O-ring with Recessed PlugS9 =Internal O-ring on both ends	B = Buna N E = EPDM S = Silicone V = Viton T = Teflon encapsulated Viton (0-ring only)	F = Flushed with 18megohm DI water (Constructed with 10" modules)

# Filter Housings

Shelco manufactures a full line of filter housings. From our rugged single cartridge housings to our heavy duty multi-cartridge housings. Shelco is the perfect choice for your filtration solutions.



# **Filter Products Company**

5220 Klockner Dr. Richmond, VA 23231 USA Tel: 1 (800) 726-5515 / E-mail: info@filterproducts.com