# 

# Memtrex\* MP-E FACT SHEET

# Pleated filters with polyethersulfone membrane



Figure 1: Memtrex MP-E (MMP-E) filters

## **Description and Use**

Memtrex MP-E (MMP-E) filters (Figure 1) incorporate a modified asymmetric polyethersulfone membrane with polypropylene support layer and components for enhanced service life and cleanliness in UPDI water and other microelectronics applications.

The Electronics (E) Grade Memtrex-MP-E filters are manufactured utilizing a high-purity rinse on each and every filter to reduce TOC and trace metals below 5.0 ppb. This is ideal for final filtration on DI water pads and POU applications. These filters are also 100% integrity-tested to ensure reliable particle retention.

The MMP-E filter is just one example of our strong commitment to the electronics industry. Our complete portfolio includes filters for every stage of processing, and we offer custom solutions for your unique applications. Veolia Water Technologies is your complete source for filters, crossflow membranes, housings and other filtration equipment.

### **Typical Applications**

Memtrex-MP-E filters are specifically designed for the filtration of ultrapure semiconductor water. Typical applications include:

- UPDI Water Pad
- High Purity Chemicals
- Point of Use Applications

## **General Properties**

Memtrex MP-E filters are available the following absolute pore size micron ratings: 0.03, 0.1 and 0.2  $\mu$ m. Tables 1, 2, 3, 4 and 5 show further details on materials of construction, dimensions, operational limits, integrity testing and flow performance.

#### **Table 1: Materials of Construction**

Media	Hydrophilic polyethersulfone membrane			
Support Layers	Polypropylene Microfiber			
Core and Cage	Polypropylene			
Endcaps & Adapters	Polypropylene			

#### **Table 2: Dimensions**

Nominal O.D.	Nominal I.D.	Effective Filtration Area
2.75" (70 mm)	1.25" (31mm)	8.1 ft <sup>2</sup> (0.75 m <sup>2</sup> )

#### **Table 3: Operational Limits**

Maximum Forward	60 psi (4.1 bar) at 70ºF
Differential Pressure	(21ºC)
Maximum Reverse	30 psi (2.1 bar) at 70ºF
Differential Pressure	(21ºC)
Maximum Operating	180°F (82°C) at 10 psid
Temperature	(0.7 bar) in water

#### Table 4: Integrity Testing

Pore Size Rating	Specification		
0.03 µm	≤45 cc/min at 50 psig (3.45 bar)		
0.1 µm	≤45 cc/min at 50 psig (3.45 bar)		
0.2 µm	≤19 cc/min at 30 psig (2.1 bar)		


Air diffusion per 10" module after saturation with clean water.

# Additional Information

Memtrex-MP-E filters with polypropylene components may be autoclaved (121°C, 30 minute cycles) or in situ steam sterilized (125°C, 30 minute cycles) for a maximum accumulated exposure of 10 hours. Memtrex-MP-E filters with polyethylene components must not be autoclaved or in situ steam sterilized. Alternatively, the filters may be sanitized with compatible chemical agents.

- The component materials of Memtrex-MP-E filters are suitable for use in articles intended for repeated food contact as specified in the United States Code of Federal Regulations, Title 21. Memtrex-MP-E filters meet the test criteria for USP class VI-121°C Plastics and pass the MEM Elution Cytotoxicity Test.
- Aqueous extracts from Memtrex-MP-E filters contain less than 0.25 EU/ml. The filters typically exhibit low levels of non-volatile residues. The filters rinse to less than 5 ppb TOC and less than 5 ppb trace metals in 25 min at 2.5 gpm per 10" module in UPDI water.
- Table 6 provides more information on ordering Memtrex MP-E filters

#### Table 5: Flow Performance in Clean Water<sup>1</sup>

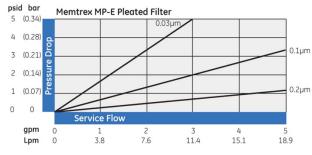

<sup>1</sup>Data based on 10" length filter

#### **Table 6: Ordering Information**

Туре	Absolute Micron Rating	Nominal Cartridge Length	End #1 Adapter	End #2 Adapter	Elastomer Material	Grade
ММР	83 = 0.03 μm 91 = 0.1 μm 92 = 0.2 μm	1 = 10 inch (25 cm) 2 = 20 inch (51 cm) 3 = 30 inch (76 cm) 4 = 40 inch (102 cm)	$\begin{array}{llllllllllllllllllllllllllllllllllll$	A = Open End Gasket B = 120 O-Ring C = 213 O-Ring G = Closed End Cap H = Fin Adapter	B = Buna-N E = EPDM S = Silicone T = Teflon <sup>2</sup> Encapsulated Viton <sup>2</sup> (only in 222 and 226 sizes) V = Viton	E = Electronic

<sup>2</sup>Teflon and Viton (registered trademarks of The Chemours Company)

